

SHERRILL® Bedroom by design

Tool Free Bed Assembly Instructions

1 Unpack from box and layout parts. See parts list on back page.

2 Attach a Side Rail to Footboard by aligning the two bracket pieces to insert the posts into matched holes, and then pressing down to lock in place (see line drawing included here). Repeat attachment process assemble second Side Rail to Footboard.

NOTE: It is best to start with side rail assembly to footboard as it is lighter than headboard and safer to move when assembled.


3 Slide assembled side rails and footboard over to headboard and repeat attachment process.

4 Insert 5 notched slats into matching slots on side rails. Press in until flush.

NOTE: If the slats are upside down, then they will not sit flush in the notch and need to be flipped over.

5 Place boxspring or bunkie board on top of slats and add a duvet cover over boxspring if desired. Then place mattress on top of boxspring and dress with sheets, bedding and pillows.

If using an adjustable base, you can skip the slat install process and use the legs that come with the base OR remove the adjustable base legs and place the base directly onto the slats. Finish by running power cord under bed frame to outlet.

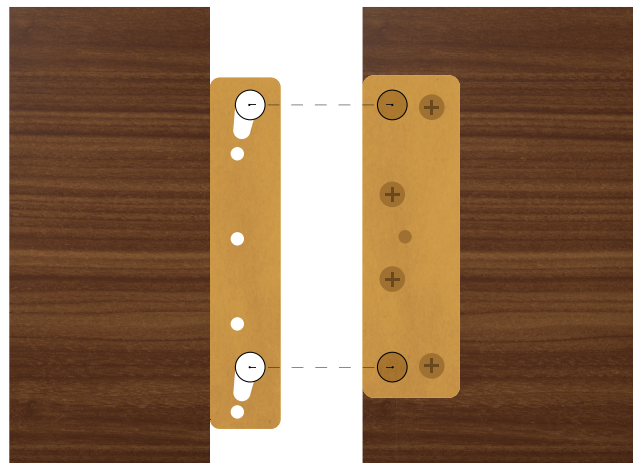

Ready to build the rest of your bedroom?

Scan here to see all of the possibilities you can design with custom dressers, nightstands, and more.



Parts List

- ① Headboard - 1 Included
- ② Footboard - 1 Included
- ③ Side Rails - 2 Included
- ④ Support Slats - 5 Included

S H E R R I L L [®] Bedroom **by design**